


## Type AW - Alphawedge

Designed for Ribdeck® E60 profiles manufactured by Hare Decking (formerly Richard Lees®).



Locking Plate: Pre-galvanised strip  
Wedge: Malleable iron, zinc plated.

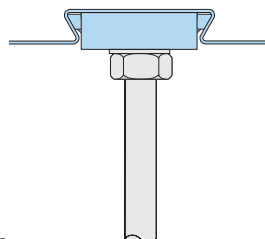


Product Code	Rod min 4.6	Safe Working Load (FOS 3:1)	Tightening Torque Nm
		Tensile / 1 Rod kN	
AW06	M6	1.0	10
AW08	M8	1.0	10
AW10	M10	1.0	10



➤ Although the Type AW is similar in appearance to Type AMD (page 66), it should NOT be used in profiles manufactured by Anglian Metal Deck.



### How to install...

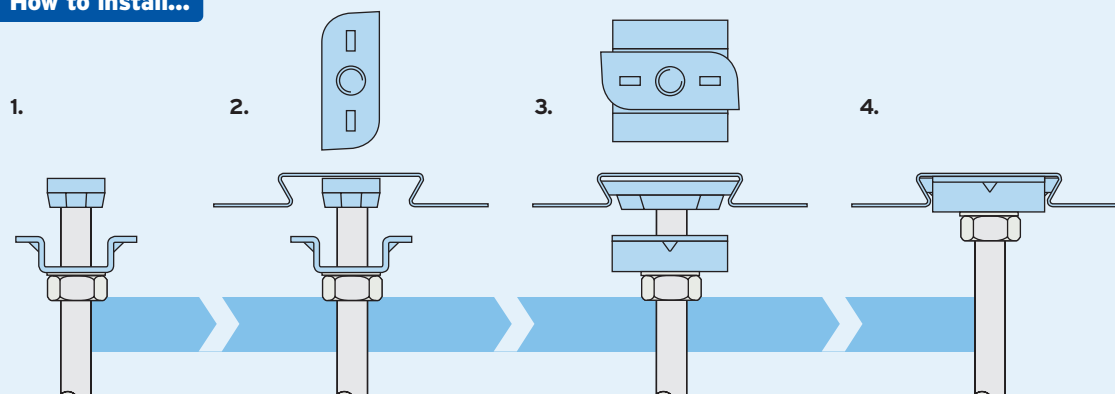

- 1) Pre-assemble the locking plate and wedge (flat surface up) onto the threaded rod.
- 2) Insert the wedge into the re-entrant channel of the decking and rotate 90°.
- 3) Slide the plate up the threaded rod, over the wedge, to lock it in position into the channel.
- 4) Tighten the locknut beneath the plate to hold the assembly in position.

➤ Install the decking fixings after the concrete has been poured and has reached full strength.

➤ If the decking profile is deformed or distorted, do not install the fixing. If in doubt, contact the Technical Support team for advice.



For Characteristic Resistances when designing a connection to Eurocode 3, please refer to DoP No.016 on the website [www.Lindapter.com](http://www.Lindapter.com)