



## Type MF


Specifically developed for use with MetFloor® 60 and MetFloor® 80 profiles manufactured by Composite Metal Flooring (CMF®).

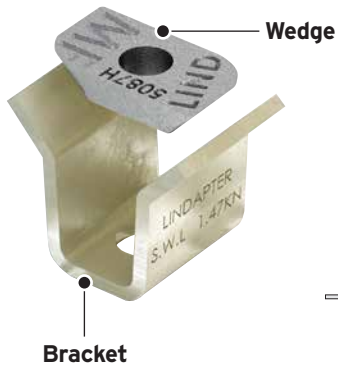

Bracket: Steel strip, zinc plated + JS500  
Wedge: Malleable iron, zinc plated.

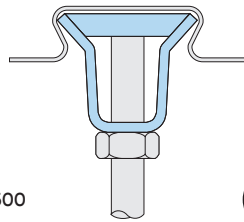


Product Code	Rod min 4.6	Safe Working Load (FOS 3:1)	Tightening Torque Nm
		Tensile / 1 Rod kN	
MF06	M6	1.47	10
MF08	M8	1.47	10
MF10	M10	1.47	10

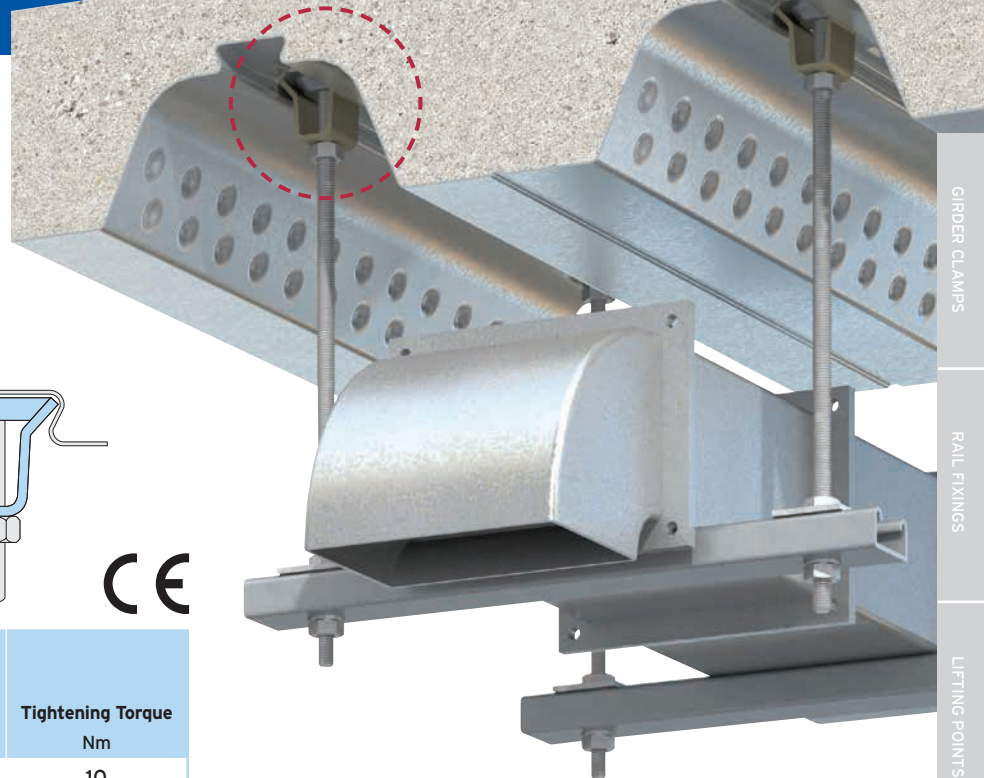

➤ Although the Type MF is similar in appearance to the Type MW2 (page 64), it should NOT be used in profiles manufactured by Kingspan® Structural Products.



### How to install...

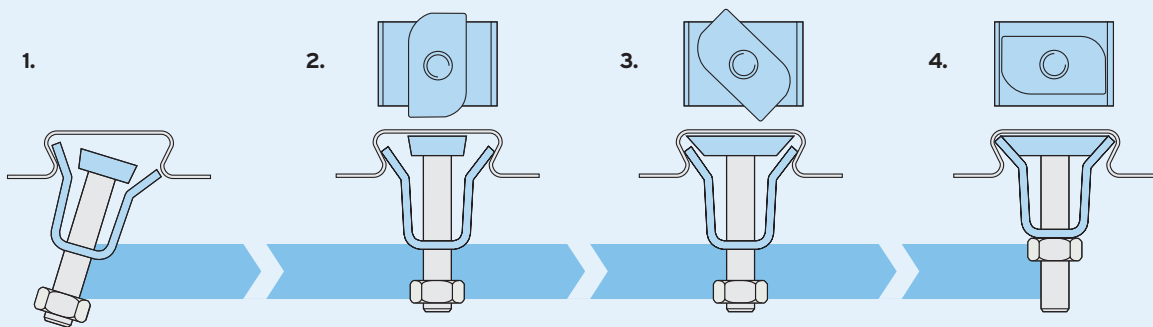

- 1) Pre-assemble the bracket and wedge (flat surface facing up) onto the threaded rod and insert one side of the bracket into the re-entrant channel of decking.
- 2) Insert the other side of the bracket into position inside the decking.
- 3) Turn the wedge clockwise until the position in Fig. 4 has been achieved.
- 4) Tighten the nut on the rod to a torque of 10Nm (prevent rod from rotating).

➤ Install the decking fixings after the concrete has been poured and has reached full strength.

➤ If the decking profile is deformed or distorted, do not install the fixing. If in doubt, contact the Technical Support team for advice.



For Characteristic Resistances when designing a connection to Eurocode 3, please refer to DoP No.017 on the website [www.Lindapter.com](http://www.Lindapter.com)